

# MC Disinfecting Wipes



- Kills 99.9% of Bacteria in Just 15 seconds\*\*
- Kills SARS-CoV-2 in 30 Seconds!
- Effective on a broad range of viral and bacterial pathogens
- Fresh Scent


Part number 909408 - 6 X 160 count canisters.

\*\*Staphylococcus aureus, Klebsiella pneumoniae, Listeria monocytogenes, Escherichia coli O157:H7

**Multi-Clean**<sup>®</sup>  
Your Guide to Clean

# MC Disinfecting Wipes

## Pre-Moistened Disinfectant Wipes

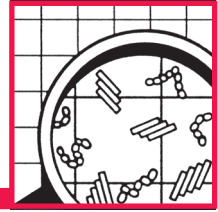

Kills 99.9% of bacteria and viruses in 15 seconds contact time.

EPA list N approved.


Kills SARS-CoV-2 (Covid) in 30 seconds.

MC Disinfecting Wipes will clean and disinfect hard, non-porous surfaces of: cabinets, chairs, computers, countertops, desks, desktops, doorknobs, fax machines, garbage cans, headsets, keyboards, railings, seats, sinks, tables, tabletops, telephones, trashcans, appliance exteriors, kitchen faucets, bathtubs, shower stalls, stove tops.

Hospital grade disinfectant.

**CLEANING:** Use one wipe to completely remove all gross debris from surfaces to be treated.

**DISINFECTING:** To disinfect hard, non-porous surfaces, thoroughly wet the surface to be treated. Treated surface must remain visibly wet for disinfecting. For heavily soiled surfaces, clean before following disinfecting instructions. Allow surfaces to air dry. For surfaces that may come in contact with food, a potable water rinse is required. MC Disinfecting Wipes will not harm most surfaces: including acrylic, fiberglass and vinyl.

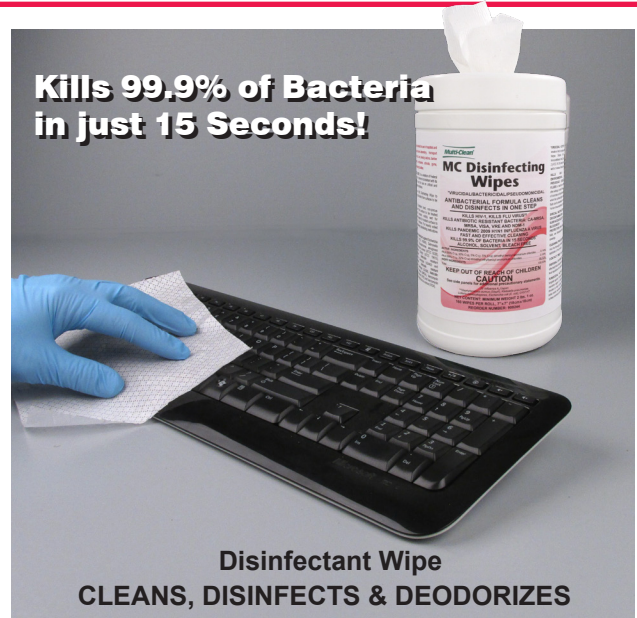

**Kills 99.9% of Bacteria in just 15 Seconds!**

**Disinfectant Wipe  
CLEANS, DISINFECTS & DEODORIZES**

- MC Disinfecting Wipes kills COVID-19, H1N1, Influenza A, MRSA, and HIV-1
- Kills Antibiotic Resistant Bacteria: CA-MRSA, MRSA, VISA, VRE and NDM-1
- Great for use in hospitals, healthcare settings, schools, daycares, offices and shopping areas
- EPA registered formula
- \*\* *Staphylococcus aureus (Staph)*, *Klebsiella pneumoniae*, *Listeria monocytogenes*, *Escherichia coli (E. coli) O157:H7*



Use on all non-porous environmental surfaces that require disinfecting.

**160 count - 6 x 7 inch Wipes In Each Canister**

### Properties

Appearance .....	White towelette,
Fragrance .....	Fresh
pH (undiluted) .....	6.5-7.5
Flashpoint .....	None
Contact time .....	5 Minutes
% Active .....	0.3% (Quaternary)
Foam .....	Low
Rinseability .....	Excellent
Storage Stability .....	1 year normal conditions
EPA Registration Number .....	1839-190-5449

**EPA List N Approved for use against SARS-CoV-2, the cause of COVID-19.**

WARNING & DISCLAIMER: Results may vary. Multi-Clean chemicals are to be used only by appropriately trained personnel. IMPROPER USE POSES RISK OF PHYSICAL INJURY OR PROPERTY DAMAGE. See appropriate Multi-Clean Method Bulletin for further warnings and information for your application. The suitability of and proper application of this product is the responsibility of the applier. The manufacturer disclaims all warranties, express and implied, including any warranties of MERCHANTABILITY AND FITNESS OF PURPOSE. The manufacturer's liability is limited to replacement of or reimbursement for any product proved defective. No person has authority to waive these disclaimers or make any representations or warranties on behalf of the manufacturer, except in writing signed by the manufacturer.

**Multi-Clean**<sup>®</sup> 600 Cardigan Road  
Shoreview, Minnesota  
Phone 651-481-1900  
Web www.multi-clean.com



**Available USA Only**

### Packaging

Case of 6.....909408  
Wipe Dimensions 6 x 7  
Case weight 9.75 lbs